



MC-05 & MC-10 Metal Clip Set

(page 1 of 2)

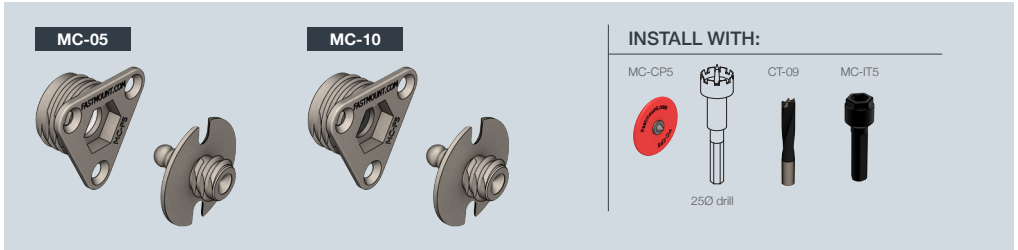


INSTALLATION STEPS Self tapping method


- 1** Drill hole through support frame and fit MC-F5 or MC-F10

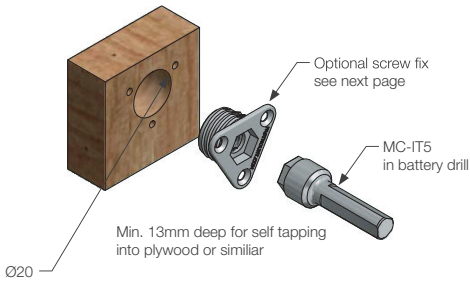


- 2** Mark panel with MC-CP5

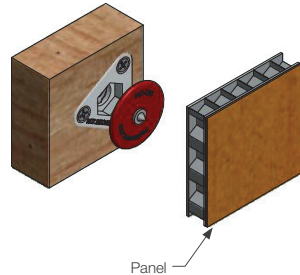


- 3** Drill panel on centre mark

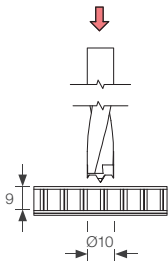

- 4** Self tapping screw fit MC-M5 into panel

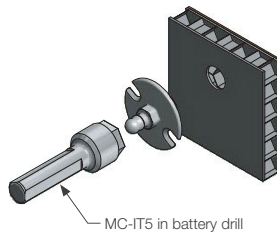


- 5** Exploded cutaway view of installed clip set

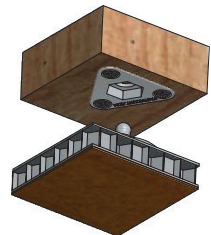

MORE INFO: SETOUT GUIDE TD-02, 09, 12. PRODUCT SHEET MC-05


MC-05 & MC-10 Maxi Metal Clip Set

(page 2 of 2)

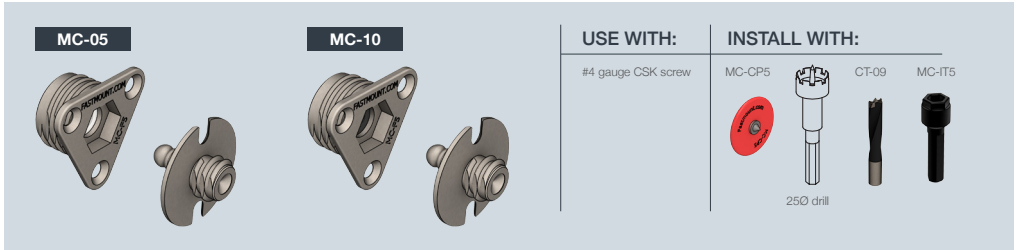


INSTALLATION STEPS Screw fix method


- 1 Drill clearance hole through support frame and fit MC-F5 or MC-F10

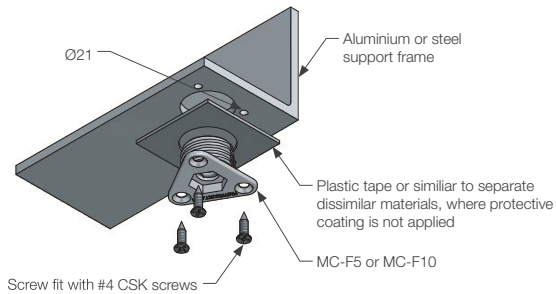

- 2 MC-M5 screw fixed to panel

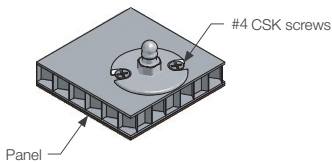

- 3 Cutaway section showing metal frame

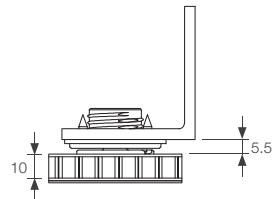

Check for separation of dissimilar metals when using MC-05 or MC-10 with aluminium or similar, in exterior applications.